




# RADE KONČAR KONTAKTORI I RELEI D.O.O.


INSTRUCTIONS FOR USE AND MAINTENANCE  
 UPATSTVO ZA UPOTREBA I ODRŽUVAЊE  
 UPUSTVO ZA UPOTREBU I ODRŽAVANJE

CNN 9, CNN 12, CNN 18, CNN 22, CNN 25, CNN 30, CNN 32, CNN 40  
 IEC 60947-4-1, EN 60947-4-1

Dimension drawing / Димензиски скици / Merne skice

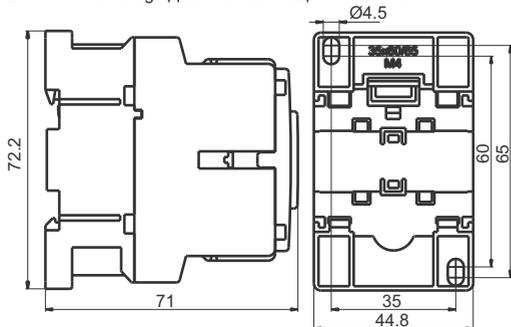



CNN 9, CNN 12, CNN 18, CNN 22, CNN 25, CNN 30

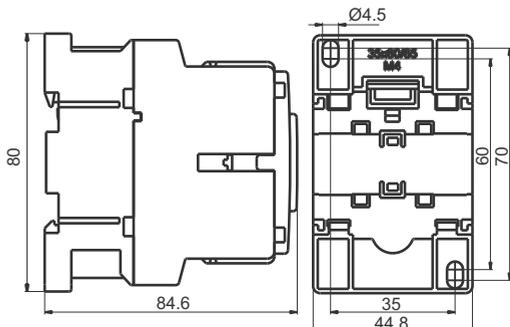

CNN N32, CNN 40



Mounting on rail 35mm (DIN 50022) / Монтирање на шина 35mm / Montaža na šinu 35mm

Replacement of the coil  
 Замена на калем  
 Zamena kalema

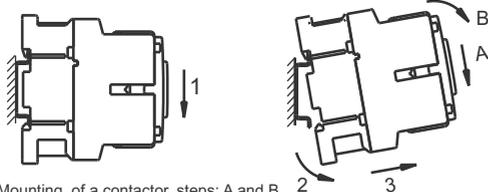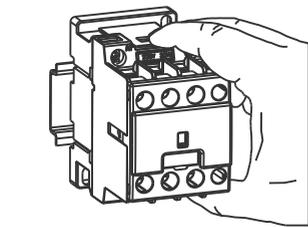

Mounting, of a contactor, steps: A and B.  
 Unmounting, of a contactor, steps: 1, 2 and 3.


Монтирање на контактор, чекор: А и В  
 Демонтирање на контактор, чекор: 1, 2 и 3  
 Montaža kontaktora, korak: A i B  
 Demontaža kontaktora, korak: 1, 2 i 3

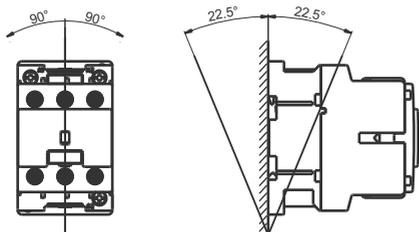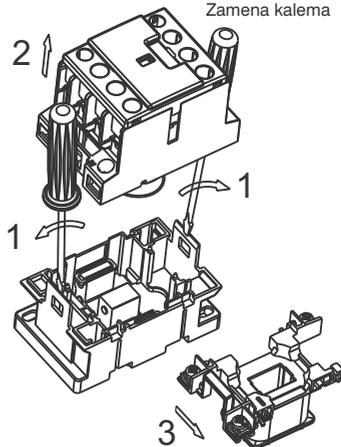

Possible installation positions / Можни инсталациони позицији / Moguhi položaj instalacije


Conductor cross section  
 Пресек на проводник  
 Presek provodnika

	CNN 9 CNN 12 CNN 18	CNN 25 CNN 30 CNN 32 CNN 40	mm <sup>2</sup>
Solid	1.5-6 + 1.5-6	2.5-10 + 2.5-10	
Fine Wire	1-4 + 1-4	1.5-6 + 1.5-6	

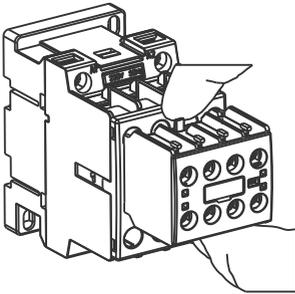

Mounting auxiliary block BP3  
Монтирање помошен блок БП3  
Montaža pomožni blok BP3


Detail: C

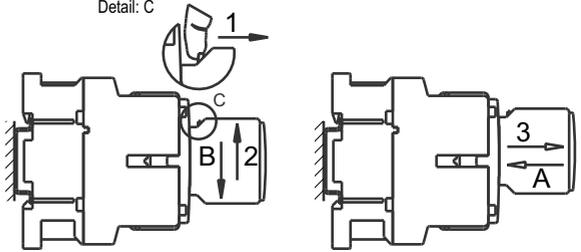

Mounting, of an auxiliary block, steps: A and B.  
Unmounting, of an auxiliary block, steps: 1, 2 and 3.

Монтирање на помошен блок, чекор: А и Б  
Демонтирање на помошен блок, чекор 1, 2 и 3

Montaža pomožni blok, korak: A i B  
Demontaža pomožni blok, korak: 1, 2 i 3

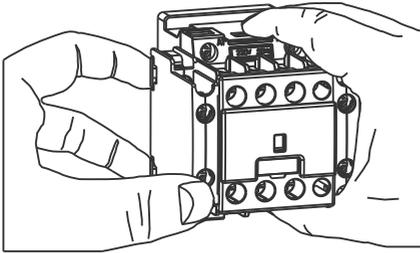

Mounting step A

Mounting step A1




Mounting step B

Mounting step B1

Mounting step C



Mounting step C

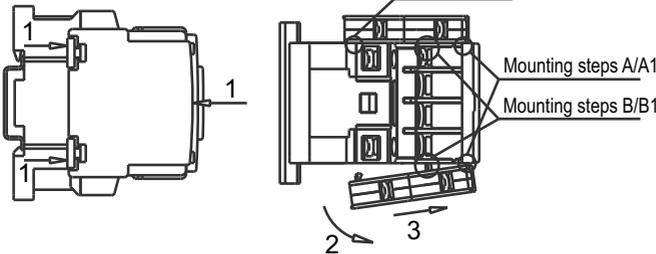

Mounting, of an auxiliary block, steps:  
- First put the block in position A/A1 and B/B1, second push the block in position C  
Unmounting, of an auxiliary block, steps:  
- First put the hand on the block like it is shown on the picture. After with the two fingers push it up the block - position 1, rotate the block - position 2 and position 3 take off the block.



**RADE KONČAR KONTAKTORI I RELEI D.O.O.**

1000 - Skopje, Macedonia, III Makedonska brigada br.54

Tel./Fax++389 (0)2/ 2461-106; 2465-586; 2463620; 2463-596

E-mail:marketing@radekoncar.com.mk, E-mail:export@radekoncar.com.mk;

http://www.radekoncar.com.mk

311030X



RECYCLABLE